

OPERATING INSTRUCTIONS

PORTABLE MODELS

1. Open case take out tank and control, and fix in position outside with the jet on vaporiser tube carefully inserted in the burner. Replace utensil grid, open wind shields and slide on to catches which are pulled out of case at both ends. (Fix top rack by sliding out supports to rest on wind shields—Senior model only.
2. Unscrew petrol tank filler cap and fill about three quarters full with **clean** petrol. Screw up filler cap again tightly.
3. Make sure that burner control knob is tightly screwed in.
4. Unscrew small knurled knob in tank filler cap about one turn, apply pump nozzle and pump up pressure until considerable resistance is felt. Don't be afraid to obtain plenty of pressure, this is essential. Tighten up small knurled knob.
5. **Senior Portable only.** Slide the knob controlling second burner through the frame to the outside, and see that it is screwed into the "off" position.
6. **To light stove when cold.** Turn burner control full on quickly, and at the same time apply light to burner. The instant a hiss is heard, the gas is ready to light.
7. **To light stove when warm.** Proceed as before, but open control valve gently until slight hiss is heard, then light. A yellow flame will appear, which should be kept to a moderate size by means of the valve, until flame turns blue. The valve can then be opened fully, as desired.
8. After stove has been burning for three or four minutes, again pump up as No. '4' when stove should continue to burn for some considerable time.
9. **Senior Portable only—to light second burner.** Allow first burner time to get hot, then unscrew second burner control, and light. To obtain full flame, the control should be unscrewed as far as it will go.

Spare Parts and Re-placements.

Filler Cap Washer			3d.
Needle & nut			8d.
Needle nut & needle rod			1/6
(Be sure and Specify Model)			
Spindle gland & Bakelite control wheel			2/6
Vaporiser tube complete with nozzle & coil			3/-
(Be sure and Specify Model—See Catalogues)			
Nozzle only for end of vaporiser tube			1/6
Internal carburettor jet with gauze			1/6
Burner perforated ring			6d.
Filler cap and air valve complete			2/-
Air pump			1/6

Postage or Fitting Extra